

FINISHING TOUCH®

FLAWLESS™




FACIAL HAIR REMOVER

Thank you for your purchase of FLAWLESS™, the easy and convenient facial hair remover.

Installing / Changing Battery

- Remove the FLAWLESS™ cap (Image 1).
- Grab the upper section of the unit with one hand, the bottom half with the other, and pull apart (Image 2) to reveal the battery chamber.
- Place 1 AA battery into the compartment, making sure the positive pole (+) is facing the bottom of the unit.
- Slide/snap the unit's bottom casing back into place (Image 2).


IMAGE 1

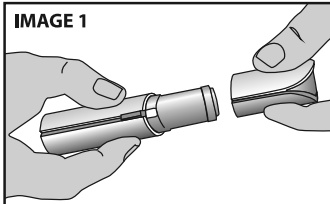

How to Use

- Remove the FLAWLESS™ cap (Image 1).
- Slide the switch located on the side of the unit upward into the "ON" position (Image 3). The light will automatically turn on when the unit is "ON".
- Gently press the head of the unit flat against your skin. The unit should not be on an angle. Proceed making small circular motions to remove unwanted hair (Image 5).

IMAGE 2

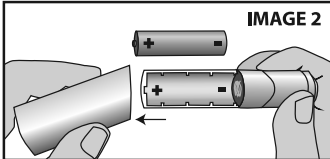


NOTE: It is normal for the head to become warm with use.

Cleaning (Be sure unit is off)

- Twist the rotating hair removal head counter-clockwise and lift off (Image 4).
- After each use, clean the head by using a brush (included) to wipe away the hair residue.
- Empty any hair from the body of the FLAWLESS™ unit by turning it over and gently tapping the sides.
- To put the hair removal head back on the unit, line up the "groove" indicators on the cap with those on the unit and twist clockwise (Image 4).

IMAGE 3

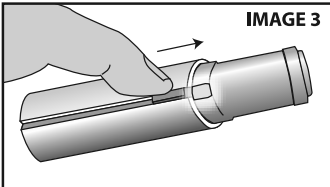

Tips & Pointers

- For superior results, use on hair 1/4" in length or less.
- If the unit begins to slow down, clear the hair removal head and body of any hair residue. If the unit is still running slow change the battery.
- Gentle enough to use every day.
- For airbrush-like make-up application, use daily.

NOTE: Prior to first use, test the FLAWLESS™ on a small area. If any sensitivity or allergic reactions occur, discontinue use immediately. Do not use your Flawless on sensitive or irritated skin.

Replacement Head

For optimal results it is recommended that you replace your Flawless head every 6 months. The head may need to be replaced sooner if the Flawless loses performance or if the head becomes chipped or damaged in any way. Go to finishingtouchflawless.ca/heads for special replacement head offer.

IMAGE 4


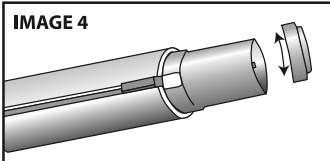


IMAGE 5

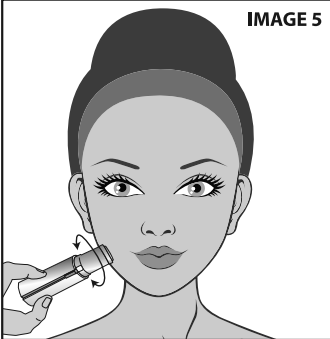

Warning

- Keep out of reach of children.
- Do not use on irritated skin. Discontinue use if skin irritation occurs.
- Exercise caution when using around eyes.
- Do not rinse trimmer head under water.

- Do not submerge unit under water.
- Store in a cool dry place when not in use.
- Do not connect battery improperly, charge, or dispose of in fire. Battery may explode or leak.
- Dispose of old batteries according to all applicable local regulations.