

SUPER-BRITE LED GARAGE LIGHT

INSTRUCTIONS

No Tools required!

- 1. Remove protective cap from unit. (Figure.1)
- 2. Screw unit counterclockwise directly into light socket if socket is on ceiling. (Facing down). Screw unit clockwise into light socket if socket is on a wall. (Facing outwards). (Figure.2)
- 3. Turn unit on by using the light switch for that socket.
- 4. Adjust each LÉD light panel as desired by moving up or down. (Figure.3)

CAUTION:

HI-INTENSITY LED BULBS!
NEVER LOOK DIRECTLY INTO THE LIGHT.
Make sure that the socket switch is turned off before installation and only operate with the socket's ON/OFF switch.



LEDs ARE NOT REPLACEABLE

FOR INDOOR USE ONLY

SPECIFICATIONS

- 120V, 60Hz, 250mA, 30W
- 90° Adjustable panels
- 4,300 Lumens
- 144 High Intensity LED bulbs

CAUTION:

- DO NOT stare directly into light.
- Risk of electric shock if used improperly.

Distributed by: Supertek Canada Inc. Mont-Royal, QC H4T 1X2

www.clikit.ca

Customer Service: 1-800-304-8354





