USER MAINTENANCE INSTRUCTIONS:

- No lubrication is necessary. Keep all surfaces clean and free of dust, dirt or debris.
- If any malfunction occurs, DO NOT attempt to repair the unit. This appliance has no user-serviceable parts

CAUTION:

- 1. Shower use only. Do not submerge! Not for use in bath tubs!
- Supervision is recommended when this appliance is used by/on/or near individuals with disabilities.
- 3. Use this appliance only for its intended uses as described in this manual. DO NOT use attachments that are not included in the Spin Spa offering.
- 4. Do not use this product if battery compartment is exposed or battery door is not fully installed.
- 5. Keep away from heated surfaces
- 6. DO NOT mix old/new batteries
- 7. DO NOT mix alkaline, standard, or rechargeable batteries.
- 8. Batteries must be recycled or disposed of properly.
- Do not use on broken skin or areas of the skin with a rash, severe acne or other skin ailments.
- 10. Keep away from hair.

SAFETY FEATURE: To prevent damage, the attachments are designed to come loose & may fall off if too much pressure is applied.



The Spinning Brush That Turns Showering Into A Spa Experience!





ATTACHMENTS/FEATURES:









A. Pumice Stone

B. Microdermabrasion C. Massage Attachment

Attachment

D. Cleansing Attachment

E. Mesh Sponge

- **A. Pumice Stone:** Smooths rough and calloused skin. Use with light pressure. Limit use to 3-4 seconds at a time
- B. Microdermabrasion Attachment: Exfoliates skin and can be filled with your favorite liquid soap (see below instructions)
- C. Massage Attachment: Gentle cleaning and soothes aches and pains
- D. Cleansing Attachment: Gentle Cleaning
- **E. Mesh Sponge:** Gentle Exfoliation

NOTE: The Spin Spa is designed for use in the shower. Do not submerge or use in the bathtub.

NOTE: To Fill The Microdermabrasion Attachment With Soap

- 1. Ensure unit is turned off.
- 2. Remove the attachment by pulling away from the handle.
- 3. Pull the plug out on the side of the head (see Illustration #1).
- 4. Pour in a small amount of your favorite liquid soap (see Illustration #2).
- 5. Secure the plug and reattach the attachment to the unit's head.



Illustration #1


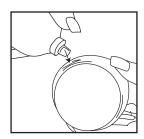



Illustration #2


INSTALLING/CHANGING THE BATTERIES:

Spin Spa requires three (3) AA Batteries

  - 1. Push button A, then slide Battery door off to install batteries (see Illustrations #3 & #4)
- 2. Insert 3 new AA batteries.
 - Do not get water into battery compartment.
 - Do not open compartment while showering.
 - Be sure that you and appliance are completely dry before opening the battery door.
- 3. Slide the battery door back on, ensuring it slides under rails (B).






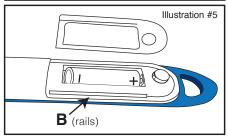

USING YOUR SPIN SPA:

- 1. Align and attach the desired attachment to the Spin Spa Head (See illustration #6).
- 2. To change attachments, pull outwards (See illustration #7).
- 3. Apply soap to the brush attachment.
- 4. Press on/off button, to activate **Spin Spa** (See illustration #8).
- 5. Adjust speed by pressing the hi/low button (see illustration #9).

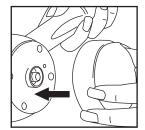


 


Illustration #6

Illustration #7

 

 


Illustration #8

Illustration #9

CLEANING YOUR SPIN SPA:

- 1. Rinse soap from attachments with warm water after every use, allow attachments to dry completely before reattaching to the handle.
- 2. Wipe **Spin Spa** with a damp cloth.