

# BASEBOARD BUDDY®

For best results, wet the Cleaning Pad with water or your favorite cleaner before use.


## IMPORTANT INSTRUCTIONS

### READ ALL INSTRUCTION BEFORE USING

- Use this product only for the purposes described in these instructions.
- Keep Cleaning Pad dry in-between use.
- Rinse the Cleaning Pad if it gets dirty.
- Replace the Cleaning Pad when worn down.
- This is not a toy. Keep away from children.

## INSTRUCTIONS

### Components

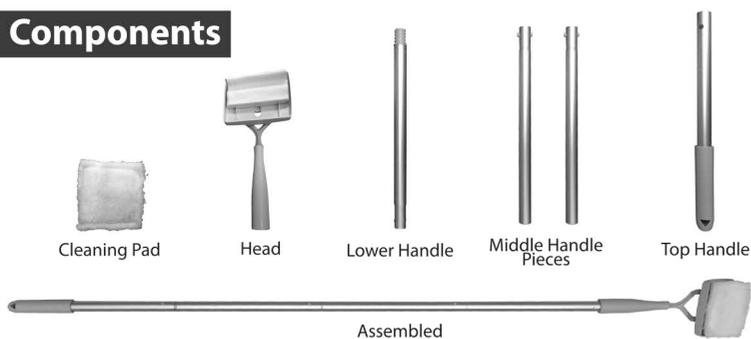

### Assembling Your Baseboard Buddy® Cleaner

1. Start by connecting the Lower Handle to one of the Middle Handles. Make sure that the holes of the Lower Handle are aligned with the buttons of the Middle Handle.
2. Connect the second Middle Handle to the end of the assembly. Make sure that the holes of the first Middle Handle are aligned with the buttons of the second Middle Handle. If you want to make your Baseboard Buddy® cleaner shorter, remove the second Middle Handle.
3. Next, connect the Top Handle to the end of the Middle Handle. Make sure that the holes of the Middle Handle are aligned with the buttons of the Top Handle.
4. Attach the Head of the Baseboard Buddy® cleaner by screwing it onto the Lower Handle.
5. If you need to clean the Cleaning Pad, simply peel it from the Head of the unit. Replace the Cleaning Pad by attaching the back of it to the Head of the Baseboard Buddy® cleaner.



### Cleaning Baseboards


DO NOT UNSCREW THE BASEBOARD BUDDY® CLEANER ALL THE WAY. HEAD WILL COME APART. Loosen the screw to adjust the height of the Cleaning Pad. Retighten before use.

1. Adjust the height of the Cleaning Pad of the Baseboard Buddy® cleaner for the height of your baseboards. Slightly loosen the screw on the back of the cleaning head, move the pad up or down, and re-tighten the screw. (See PHOTO 1)
2. For best results, make sure that the Cleaning Pad is adjusted so that the handle of the Baseboard Buddy® cleaner is at a 45° angle from the pad. (See Photo 2)
3. For normal dusting, use the Baseboard Buddy® cleaner while dry. If baseboards are really dirty, spray the Cleaning Pad and your baseboards with your favorite all-purpose cleaner, degreaser, or use with soapy water.  
**NOTE:** Wipe Cleaning Pad with rag occasionally to remove excess dirt.
4. Place Baseboard Buddy® cleaner on baseboard and glide along. You can move (click) the handle back-and-forth to go in either direction. Ensure that the cleaning head is adjusted to prevent the plastic frame of the cleaning head from contacting walls/floors to avoid scratching.
5. Rinse the Cleaning Pad as needed.

### Cleaning Tops of Door Molding and Window Frames

DO NOT UNSCREW THE BASEBOARD BUDDY® CLEANER ALL THE WAY. HEAD WILL COME APART. Loosen the screw to adjust the height of the Cleaning Pad. Retighten before use.

1. Adjust the height of the Cleaning Pad of the Baseboard Buddy® cleaner for the height of your door/window moldings. Slightly loosen the screw on the back of the head, move the pad up or down, and re-tighten the screw.
2. Make sure that the Cleaning Pad is adjusted so that the handle of the Baseboard Buddy® cleaner is perpendicular to the pad.
3. Place Baseboard Buddy® cleaner on the top of the door molding and glide along. You can move (click) the handle back-and-forth to go in either direction (See PHOTO 3). For normal dusting, use the Baseboard Buddy® cleaner while dry. If your tops of door moldings or window frames are really dirty, spray the Cleaning Pad and the tops of your door moldings or window frames with your favorite all purpose cleaner, degreaser, or use with soapy water.  
**NOTE:** Wipe Cleaning Pad with rag occasionally to remove excess dirt.
4. Rinse the Cleaning Pad as needed.

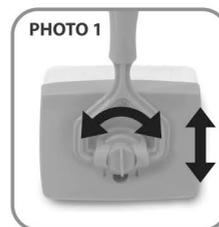

To Order Additional Cleaning Pads,  
Please Visit  
[www.pads.baseboardbuddy.ca](http://www.pads.baseboardbuddy.ca)

©2016 APG

Baseboard Buddy is a Registered Trademark of Michele Goodman

Product and Appearance may vary

**Supertek™**

Distributed by:  
Supertek Canada Inc.  
Mont-Royal, QC H4T 1X2

Customer Service: 1-800-304-8354