 




Instruction Guide

The All-In-One Personal Trimmer Package Includes

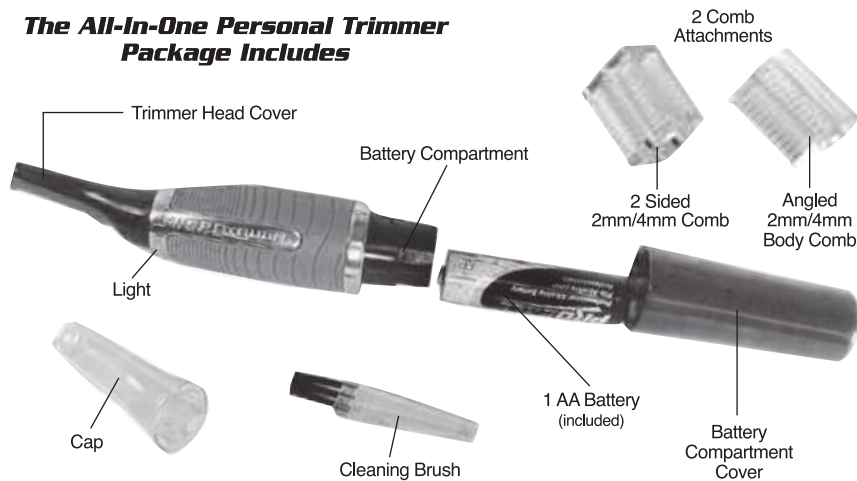


Thank you for the purchase of your new MicroTouch® Max Personal Hair Trimmer.

Getting Started:


Important: Prior to first use, test the trimmer on a small area on your arm or leg. If any sensitivity or allergic reactions occur, discontinue use immediately. Do not use your trimmer on sensitive or irritated skin.

Inserting/Replacing The Battery:

1. Make sure your Micro Touch Max is off and remove the cap. Firmly hold the center part of the unit with the trimmer head facing toward your left hand. Twist the **Battery Compartment Cover** counter clockwise and slide it off to expose the **Battery Compartment** (Figure 1).

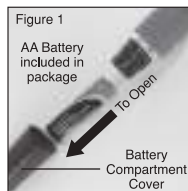

2. Remove old battery if necessary. Insert a new "AA" battery by placing the positive end of the battery into the main body of the unit (Figure 2).

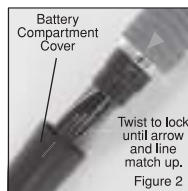

IMPORTANT: Dispose of the old battery according to local regulations.

3. To replace the **Battery Compartment Cover**, slide the base over the battery and onto the unit. Twist the **Battery Compartment Cover** clockwise until the arrow on the body of the unit and the line on the grey battery compartment cover match up.

Warning: Attempting to force the cover on incorrectly may cause damage to the unit.

Important: To avoid damage to your trimmer, be sure that the battery is inserted in the proper direction indicated by the +/- signs. If your trimmer will not be used for a long period of time, remove the battery from the unit.

How to use MicroTouch® Max:

1. Remove the cap and turn your Micro Touch Max on by pressing the power button (Figure 3). Please note both the light and the trimmer will come on.
2. Hold the trimmer at a 45 degree angle to desired area and trim in the opposite direction of your hair growth (Figure 4).
3. Continue to trim in the opposite direction of the hair growth until the hair is removed (Figures 5 & 6).

Tip: For the cleanest hair removal, pull your skin taut with one hand while trimming.

Using The Comb Attachments:

Included with your Trimmer are two **Comb Attachments** for trimming hair. The **2 Sided 2mm/4mm Comb** is for trimming shorter eyebrow/mustache hairs. The **Angled 2mm/4mm Body Comb** is for trimming longer hairs found on the body.

1. Make sure the **Trimmer** is turned off.
2. Slide the appropriate side of the **Comb Attachment** onto the **Trimmer Head** (Figure 7). Be sure to align the grooves on the **Comb Attachment** with the grooves on the **Trimmer Head**.

Note: When using the 2 Sided 2mm/4mm Comb Attachment, be sure the trimming size you prefer is facing the same direction as the Trimmer.

Note: When using the Angled 2mm/4mm Body Comb Attachment, be sure that the length you are looking to achieve, is shown and laying against your skin. Example – To achieve the 2mm length, be sure the 2mm side is flush with the skin.

3. To remove the **Comb Attachment**, turn the power off, hold the upper center of the unit and simply slide the **Comb** off.

Care and Maintenance:

Note: Water will cause damage to your Trimmer. Do not use Trimmer in a damp room or near water. When not in use, be sure the Trimmer is turned off.

- If your MicroTouch Max starts running slowly, clean the blades as described below and then add 1 drop of baby oil to the blades.
- If your unit is running slowly after cleaning and oiling, change the battery.

Cleaning Trimmer Head:

1. Turn the **Trimmer** off and remove the **Battery**. (see step 1 of "Inserting/Replacing the Battery.")
2. Using the **Cleaning Brush**, gently wipe away any hair or dust (Figure 8).

Note: The **Comb Attachments** may be washed. However, make sure they are thoroughly dry before re-use.


3. Be sure to replace the cap when storing your Micro Touch Max.

LIMITATION OF LIABILITY

Liability limited to the purchase price of this product. Supertek Canada Inc. shall not be liable for any incidental or consequential damages or any implied warranty on this product.

Supertek™
Mont-Royal, Qc H4T 1X2
Made In China

Customer Service: 1-800-304-8354

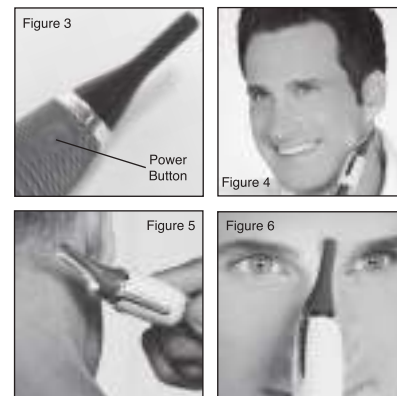

Warning:

- Keep out of reach of children.
- Avoid direct eye exposure.
- Do not look directly into light during use.
- Do not connect battery improperly, charge, or dispose of in fire. Battery may explode or leak.
- Dispose of old batteries according to all applicable local regulations.

