

Innovative **CORDLESS** Hair Dryer !

DIVINEstyler™

**RECHARGEABLE
CORDLESS HAIR DRYER**

Charge
& Go

Tangle Free!

LED Indicator

Fully Rechargeable!

Dual Heat & Cool Mode

Weighs less than .6 kg (1.5 lbs)!

Up to 37 minutes of usage

Nano-Tourmaline Technology

Salon Quality Drying & Styling



Read all instructions before use.



Owner's Manual & Style Guide


IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS, WARNINGS, AND PRECAUTIONS COMPLETELY AND CAREFULLY BEFORE USE.

Save these instructions in an easily accessible place for future use.

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

KEEP AWAY FROM WATER

 **WARNING** – Any appliance is electrically live even when the switch is OFF if it is plugged into an electrical outlet.

TO REDUCE THE RISK OF SERIOUS INJURY BY ELECTRIC SHOCK:

- ALWAYS UNPLUG APPLIANCE IMMEDIATELY AFTER USE.
- DO NOT USE WHILE BATHING OR IN A SHOWER.
- DO NOT PLACE OR STORE APPLIANCE WHERE IT CAN FALL OR BE PULLED INTO A TUB OR SINK.
- DO NOT PLACE IN, OR DROP INTO, WATER OR OTHER LIQUID.
- IF AN APPLIANCE FALLS INTO WATER, UNPLUG IT IMMEDIATELY. DO NOT REACH INTO THE WATER.

 **WARNING**

To reduce the risk of burns, electrocution, fire, or injury to persons:

1. THIS APPLIANCE SHOULD NEVER BE LEFT UNATTENDED WHEN PLUGGED IN.
2. CLOSE SUPERVISION IS NECESSARY WHEN THIS APPLIANCE IS USED BY, ON, OR NEAR CHILDREN OR INDIVIDUALS WITH CERTAIN DISABILITIES.
3. USE THIS APPLIANCE ONLY FOR ITS INTENDED USE AS DESCRIBED IN THIS MANUAL. DO NOT USE ATTACHMENTS NOT RECOMMENDED BY THE MANUFACTURER.
4. DO NOT USE AN EXTENSION CORD TO OPERATE APPLIANCE.
5. NEVER OPERATE THIS APPLIANCE IF IT HAS A DAMAGED CORD OR PLUG, IF IT IS NOT WORKING PROPERLY, IF IT HAS BEEN DROPPED OR DAMAGED, OR DROPPED INTO WATER. RETURN THE APPLIANCE TO AN AUTHORIZED SERVICE CENTER, OR TO THE STORE THAT YOU PURCHASED IT FROM FOR EXAMINATION AND REPAIR.
6. KEEP THE CORD AWAY FROM HEATED SURFACES.
7. DO NOT PULL, TWIST, OR WRAP LINE CORD AROUND APPLIANCE, EVEN DURING STORAGE.

IMPORTANT SAFETY INSTRUCTIONS

8. NEVER BLOCK THE AIR OPENINGS OF THE APPLIANCE, KEEP THEM FREE OF ANY HAIR, LINT, ETC. NEVER PLACE THE APPLIANCE ON A SOFT SURFACE, SUCH AS A COUCH OR BED WHERE THE AIR OPENINGS MAY BECOME BLOCKED.
9. NEVER DROP OR INSERT ANY OBJECT INTO ANY OPENING OR ATTACHMENT.
10. DO NOT USE OUTDOORS OR OPERATE CLOSE TO AEROSOL (SPRAY) PRODUCTS BEING USED OR WHERE OXYGEN IS BEING ADMINISTERED.
11. THIS HAIR DRYER AND ATTACHMENTS MAY BE HOT WHEN IN USE. DO NOT LET HEATED SURFACES TOUCH EYES OR BARE SKIN. ALLOW TO COOL BEFORE HANDLING. DO NOT DIRECT HOT AIR TOWARD EYES OR OTHER HEAT SENSITIVE AREAS.
12. WHILE USING THE APPLIANCE, KEEP YOUR HAIR AWAY FROM THE AIR OPENING.
13. DO NOT PLACE THE HAIR DRYER DIRECTLY ON ANY SURFACE OR ON THE APPLIANCE POWER CORD WHILE IT IS HOT OR PLUGGED IN.
14. BEFORE CONNECTING THIS APPLIANCE TO A POWER SOCKET, MAKE SURE THE VOLTAGE STATED ON THE LABEL OF THE PRODUCT CORRESPONDS TO THE VOLTAGE IN YOUR WALL SOCKET.
15. NEVER USE ACCESSORIES WHICH HAVE NOT BEEN SUPPLIED WITH THIS APPLIANCE OR WHICH HAVE NOT BEEN EXPLICITLY RECOMMENDED BY THE MANUFACTURER.

USER MAINTENANCE AND CARE

Your DIVINEstyler™ Hair Dryer is virtually maintenance-free. No lubrication is needed. Proper care can ensure optimum performance and extends the life of your appliance. Keep all vents and openings clear of dirt and dust. Ensure that the inflow and exhaust openings are not blocked while the appliance is running. If cleaning becomes necessary, disconnect the unit from the power source, allow it to cool and wipe exterior with a cloth. No repairs should be attempted by the consumer.

- Always unplug the hair dryer before cleaning.
- Use a slightly damp cloth to clean the body of the hair dryer, and dry with a clean cloth.
- Never submerge the hair dryer in water or any other liquid. Do not use abrasive cleaning products, alcohol, petrol or similar agents.

SAVE THESE INSTRUCTIONS

STORAGE

The DIVINEstyler™ is compact and easy to store. Allow appliance to cool, then store out of reach of children in a safe, dry location away from dust or moisture. Once the hair dryer is fully charged, unplug the adaptor from the power socket and either place the DIVINEstyler™ in the base, or store it in your cabinet/drawer.



CAUTION:

NEVER allow the power supply cord to be pulled, twisted, or severely bent. Do not jerk or strain cord at plug connections. Never wrap the cord tightly around the appliance. Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short. Inspect the cord frequently for damage. Do not disconnect the appliance from the power socket by pulling on the power cord. This could damage the power cord or the power socket. Stop use immediately if damage is visible or if unit operates intermittently.



WARNING: IF THE SUPPLY CORD IS DAMAGED IT MUST BE REPLACED BY THE MANUFACTURER'S SERVICE CENTER OR THE STORE WHERE THE DIVINEstyler™ WAS PURCHASED IN ORDER TO AVOID A HAZARD.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT

Correct disposal will ensure environmental protection and prevent any potentially harmful impacts on people and the environment. Adhere to the relevant legal requirements when disposing of the appliance. Your appliance contains valuable materials which can be recovered or recycled. PLEASE RECYCLE IN YOUR LOCAL FACILITY.

PARTS & ACCESSORIES

Battery % Display (POWER ON) FIG. A

3 LEDs Blue	75-100%
2 LEDs Blue	50-75%
1 LED Blue	25-50%
1 LED Red	<25%

The LED Battery % Display Indicator Chart (FIG. A) illustrates what percentage of battery life is left based on which LED sequence is illuminating.

Charging Display (POWER OFF) FIG. B

3 LEDs Flash Red	<25%
1 LED Flash Blue	>25%
2 LEDs Flash Blue	>50%
3 LEDs Flash Blue	>75%
3 LEDs Blue	100%

When charging your DIVINEstyler™, please make sure your hair dryer is switched OFF. The LED Charging Display Indicator Chart (FIG. B) illustrates the percentage of charge based on which LED sequence is illuminating.

Lithium-Ion Battery Power

** Based on preliminary testing*

Average
Drying
Time

7 Minutes

High
Heat
Mode

18 Minutes

Low
Heat
Mode

37 Minutes

Cooling
Mode

90 Minutes



POWER
INDICATOR LIGHT

TEMPERATURE
CONTROL SWITCH

CHARGING
PORT

TEMPERATURE SETTING ICONS

	HIGH HEAT
	LOW HEAT
	POWER OFF
	COOL SHOT

POWER
SUPPLY



STYLING WITH YOUR DIVINEstyler™



PIK



CONCENTRATOR



DIFFUSER



BASE / CHARGER

TEMPERATURE SETTINGS

The DIVINEstyler™ Cordless Hair Dryer has dual heat modes, and a cooling mode. As a general guide, use the **HIGH HEAT** ☀️ II heat setting for quick drying and blow drying of thicker hair, and the **LOW HEAT** ☀️ I setting for gentle drying and styling or finer hair. The **COOLING MODE** ❄️ allows you to lock the hair style in place. Switching to the Cooling Mode sends a sudden shot of cool air, whilst the air speed stays the same.

DIFFUSER ATTACHMENT

The diffuser attachment is recommended for those with curly or wavy hair so that the curls don't become frizzy and tangled. It is used to lift the hair to help preserve the hair's natural curl pattern and build body and volume. It distributes the heat broadly, as opposed to concentrating it in one area. The diffuser adds body, bounce and volume to your hair. Gently move the attachment forwards and backwards on a small section of the head. Proceed section by section along the head, until the whole head is dry.

CONCENTRATOR ATTACHMENT

The concentrator attachment is useful for directing airflow for more concentrated drying. It allows you to direct and focus the air output of the hair dryer, to control frizz and outcome when you're styling. Direct the concentrator at your hair, allowing a few inches between the nozzle and hair. We recommend using a round brush, pulling as tightly as possible to get the best results whilst styling with the concentrator. The concentrator is easily fitted to the front of the dryer.

PIK ATTACHMENT

The Pik Attachment is used to create volume, body and lift, but also may be used to smooth over curly hair. When you use the pik attachment, you will give your hair volume by lifting the hair roots up off the scalp.

CHARGING YOUR DIVINEstyler™

Remember to charge your DIVINEstyler™ after each use. Insert the power supply cord into the charging port on the bottom of the hair dryer handle or place the hair dryer in the charging base and connect the power supply cord to the base for easy charging. Then Insert the power plug into an electrical power socket. Allow the hair dryer to fully charge prior to each use. A full charge can take between 2 to 3 hours. This depends on the power current of the household. Periodically, check on battery level and re-charge, if needed. If the appliance shuts off that means it needs charging. Hair dryer will shut off automatically if it's over heated or after full 20-25 minutes of continuous usage.

NOTE: Please allow the hair dryer to cool down for approximately 30-45 minutes before re-charging.

STYLING WITH YOUR DIVINEstyler™

Nano-Tourmaline technology

The Nano-Tourmaline Technology releases negative ions as you dry your hair, which neutralize the static discharge in hair to provide hair with a shine and healthy appearance.

STYLING BASICS

1. Wash and condition the hair, then gently towel dry hair to remove excess water. This will make combing easier. DO NOT use the hair dryer on hair that is dripping wet.



TIP: The use of a styling gel, mousse, or hairspray is recommended to make the hairstyle last longer and to achieve salon results.

2. Ensure that the hair dryer has been properly charged prior to use.
3. On the handle of the hair dryer, select the temperature (LOW HEAT , HIGH HEAT, COOL MODE) using the TEMPERATURE CONTROL SWITCH.
4. The indicator light (Blue color) will turn on when the appliance is switched on.
5. Do not concentrate the heated airflow on any one area for an extended period of time.



TIP: If you are using a styling brush, best results are achieved when you section your hair. Brush and style one section at a time while directing the air flow at those sections.



TIP: If you choose to style with hands, be sure to direct the air flow exactly to the area that your hands are styling. Make sure the air is aiming onto the hair and not the scalp.

6. When you finish using the hair dryer, turn it off by sliding the TEMPERATURE CONTROL SWITCH down until the switch is in the POWER OFF position. Verify that the appliance is off by checking to see if the indicator light is off.
7. Ensure that the appliance has cooled down and is in a safe place away from the reach of children. Insert the power supply cord into the bottom of the hair dryer to charge appliance after each use.

THIS AC WIRE CARRIER CURRENT DEVICE OF UNINTENTIONAL RADIATOR IS A CATEGORY II EQUIPMENT COMPLIANT WITH INDUSTRY CANADA'S ICES-006.

LIMITATION OF LIABILITY

Liability limited to the purchase price of this product. Supertek Canada Inc. shall not be liable for any incidental or consequential damages or any implied warranty on this product.

Innovative **CORDLESS** Hair Dryer!

DIVINEstyler™

**RECHARGEABLE
CORDLESS HAIR DRYER**



Distributed by :
Supertek Canada Inc.
Mont-Royal, QC H4T 1X2
©2019 All Rights Reserved

www.clikit.ca

DIVINEstyler™ is licensed by
Creative Concepts U.S.A.
Made in China / Patent pending

