

# PERSONAL FIREPLACE HEATER



## User Instructions

Model	Voltage	Frequency	Power
YH-28	120V~	60Hz	400W

This is an electric fireplace with flickering flame effect. The principle of heating is using a fan to blow the hot air heated by the heating elements.

### Security Precautions

- WARNING:** In order to avoid overheating, do not cover the heater.
- The heater must not be located immediately below a socket outlet.
- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- This appliance can be used by children aged 8 years old and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and maintenance shall not be made by children without supervision.
- Children of less than 3 years old should be kept away from the appliance unless continuously supervised.
- Children aged from 3 to 8 years old shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 to 8 years old shall not plug in, regulate and clean the appliance or perform maintenance.
- CAUTION** – Some parts of this appliance can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

- In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
- If the power supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- The appliance cannot be used outdoors.
- Any item covering or blocking the fireplace vent in any way is prohibited. Otherwise, the fireplace will be dangerous due to overheating.
- Furniture, curtains or flammable materials should be kept 1 meter away from the Fireplace Heater.
- Cut off the power immediately if there is short-circuit.
- Please unplug the power cord if the appliance will not be used for a lengthy period of time.
- Please do not put the power cord at the front side of the Fireplace Heater.
- Although the appliance has reached safety standards, it is not recommended that it be used on multi-use carpets or high-pile carpets.
- Dispose of the package carefully. Plastic packaging material may cause environmental pollution.
- The fireplace must be used following the AC voltage rating.
- This appliance is only intended for well-insulated rooms or occasional use.
- This appliance is fitted with a thermostatic room temperature control.

### Use



power switch    display & buttons on the appliance    buttons on remote control

### Operation of the Appliance:

Firstly, plug the appliance into a mains socket.

Secondly, press "I" on the power switch to activate (located at the lower corner on the back of the appliance).

### Instruction of buttons (on both the appliance and remote control):

I	Power switch: press "I" to activate; press "O" to turn off the appliance. The display shows <b>OF</b> , meaning "OFF".
U	Remote control: press once to activate; press again to turn off the appliance. <b>Note:</b> The remote control won't be functional unless the power on the appliance is switched on.
!	Press 1st time, the display shows a number, which is ambient temperature (Centigrade). Press 2nd time for TEMPERATURE SETTING: The display blinks, showing pre-set temperature, then set the temperature by pressing the +/- buttons immediately (Get this process done within 3 seconds when the display is blinking; if the display shows 'still' digits, it's back to ambient temperature, you need to press one more time to set temperature). Press 3rd time for TIMER SETTING: The display blinks, showing <b>OH</b> (0H, 1H, 2H...), which is pre-set time length, then set the timer by pressing the +/- buttons immediately (within 3 seconds when the display is blinking).
+	To set the Temperature or Timer UP.
-	To set the Temperature or Timer DOWN.
!	Flame effect ON/OFF: press once to turn ON; press again to turn OFF. <b>Note:</b> The flame effect can be used individually as a home decor.

### Notes:

- Temperature setting range: 15~35 degrees C.
- Timer setting range: 1~8 hours.
- To get hot air, you must set temperature above ambient temperature, then, the heater will start heating and blow hot air.  
After temperature is set, the display resumes showing ambient temperature.
- During use, the heater may turn on or off depending on the temperature difference between ambient temperature and set temperature as follows:
  - When ambient temperature rises above set temperature, the heater will automatically stop heating (The fan continues blowing for 15 seconds then stops completely).
  - When ambient temperature falls below set temperature, the heater will automatically start heating and blow hot air again.
- When it's heating and blowing hot air, if you turn off the appliance using the remote control, the fan continues blowing for 15 seconds then stops completely. Meanwhile, the display continues showing the countdown till it shows **OF**. If you turn off the appliance through the power switch, the fan stops blowing immediately.

### Overheating Safety Device

Your heater is fitted with a safety device that switches off the heater in the event of overheating.

If the heater stops working, turn the heater off and inspect the blockage of inlet or outlet. **Disconnect the plug and wait at least 10 minutes** for the protection system to reset before attempting to restart the heater. If the safety device still switches the heater off and makes the heater fail to operate, take the heater to your nearest service center for inspection or repair.

**Attention:** before restarting the heater, **the plug must be disconnected for at least 10 minutes.**

If you will not use the appliance for a lengthy period of time, disconnect the plug.

### Tip-Over Safety Switch

To protect your safety, your heater is fitted with a tip-over safety switch that cuts off the power of heating when the heater is lifted up or tipped over; the fan remains blowing and the LED flame light remains on. When the heater is placed stably back to the table or the floor, the heater starts heating up again.

### Cleaning

- Always disconnect the appliance from the mains supply before cleaning.
- Clean the outside of the heater by wiping with a damp or dry cloth.
- Do not use petroleum, detergents or chemical solvents to clean the heater.
- When the heater is not used for a long time, it should be protected from dust and stored in a clean dry place.

### Disposal



#### Environmental Protection

Electrical production waste should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.



This AC wire carrier current device of unintentional radiator is a Category II equipment compliant with Industry Canada's ICES-006.

#### LIMITATION OF LIABILITY

Liability limited to the purchase price of this product. Supertek Canada Inc. shall not be liable for any incidental or consequential damages or any implied warranty on this product.



Distributed by  
Supertek Canada Inc.  
Mont-Royal, QC H4T 1X2  
www.clikit.ca

Customer Service:  
1-800-304-8354